


Installation guide

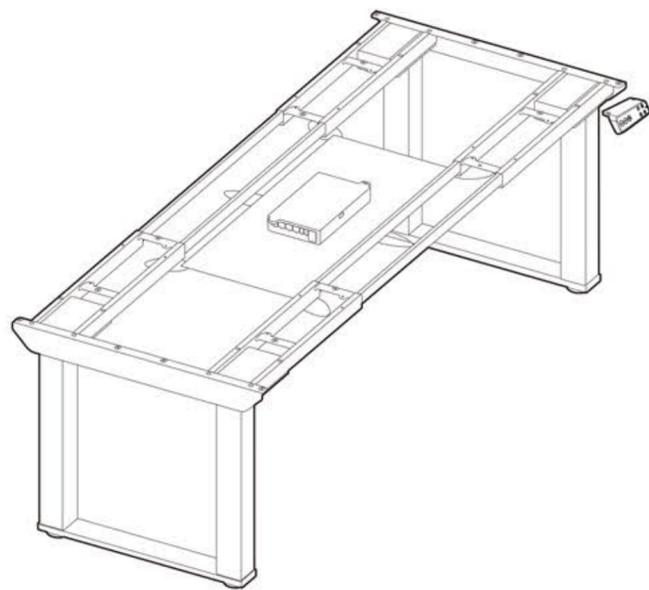

< The pictures below are for reference only, please refer to the actual product. >
Please read this product manual carefully before use, and keep it properly.


Technical Data

Max. Load Capacity	300KG
Max. Speed	38mm/s
Highest Position	1305mm
Lowest Position	655mm
Width Range	1100mm-1900mm
Applicable Desktop Size	Length: 1800mm-2400mm
	Width: 800mm-900mm
	Thickness: > 18mm


Product List

Accessory List


Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact customer service if there are any missing tools or installation problems.

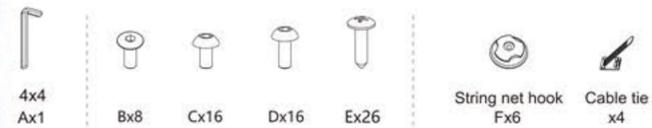


Preparation before installation



Install on carpet to prevent scratches.

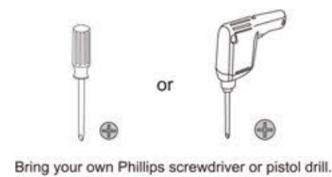

Bring your own Phillips screwdriver or pistol drill.

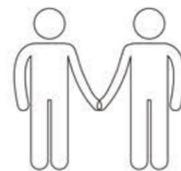


Need two or more people to cooperate together.

Part List

No.	Part
①	Supporting beam x2
②	Side bracket x2
③	Lifting column x4
④	Pedestal x 2
⑤	Handset x 1


No.	Part
⑥	Control box x1
⑦	Cables x 1
⑧	Cable management net x1
⑨	Allen key x 1

Installation Instruction

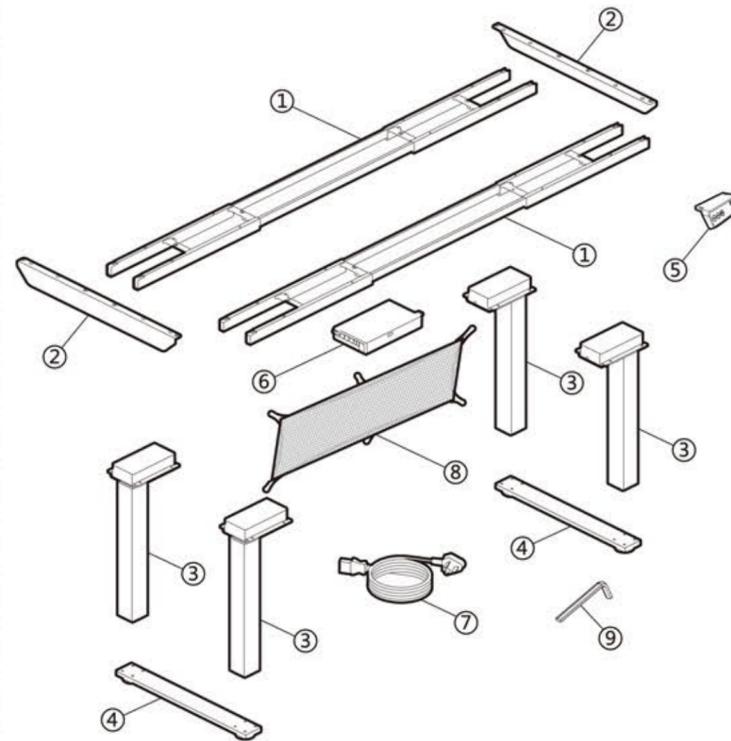


Installation Steps

STEP1 Attach the side brackets to the beam

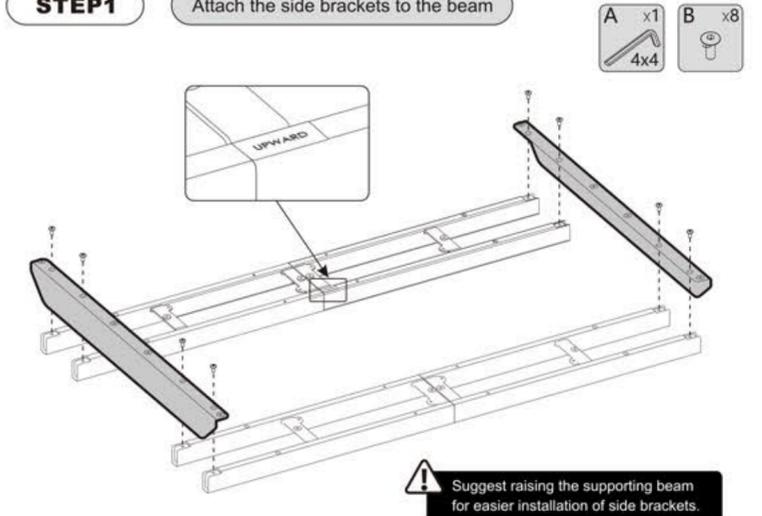

STEP2 Adjust the supporting beam

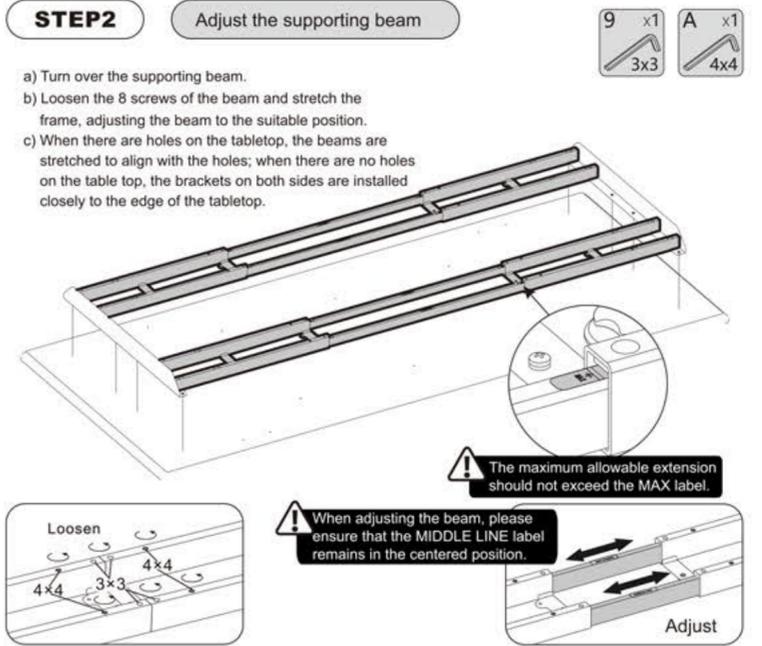

STEP3 Install the tabletop

9 x1 3x3 A x1 4x4 E x16 Self-prepared

Fix the screws in the sequence of: ● → ■ → ▲

Outer side ▲ uses 4x4 Allen key
Inner side ▲ uses 3x3 Allen key

STEP4 Install the lifting columns

A x1 4x4 C x16

STEP5 Attach the pedestals

A x1 4x4 D x16

STEP6 Install the handset

E x2 Self-prepared

Choose either of the two installation methods.

Left-handed install here Right-handed install here

STEP7 Install the control box

E x2 Self-prepared

STEP8 Connect the wires

Connect wires of the same color to the corresponding interfaces.

Handset cable ports (Choose one) Column connection cable port AC power cable port

STEP9 Install the cable management net hook

E x6 Self-prepared

When there are holes on the tabletop, the position of the cable management net hooks will be determined according to the hole positions. When there are no holes on the tabletop, the position of the hooks can be determined by laying the cable management net flat.

STEP10 Install the cable management net

Turn over the desk, make sure the handset is facing upwards along the process.