


Installation guide

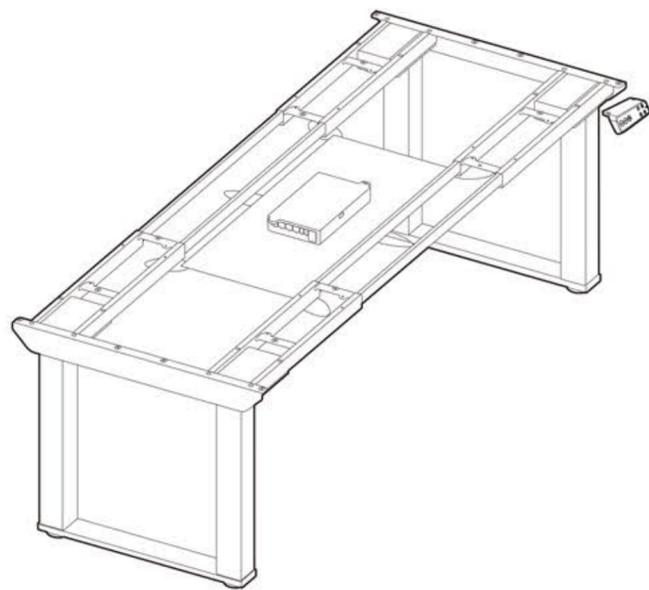

< The pictures below are for reference only, please refer to the actual product. >
Please read this product manual carefully before use, and keep it properly.


Technical Data

Max. Load Capacity	300KG
Max. Speed	38mm/s
Highest Position	1305mm
Lowest Position	655mm
Width Range	1100mm-1900mm
Applicable Desktop Size	Length: 1800mm-2400mm
	Width: 800mm-900mm
	Thickness: > 18mm


Product List

Accessory List


Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact customer service if there are any missing tools or installation problems.

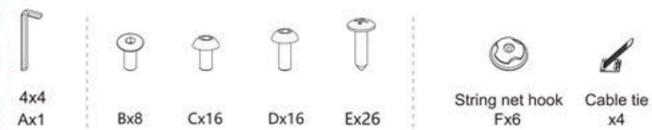


Preparation before installation



Install on carpet to prevent scratches.

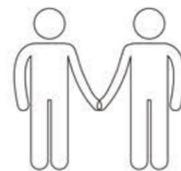

Need two or more people to cooperate together.

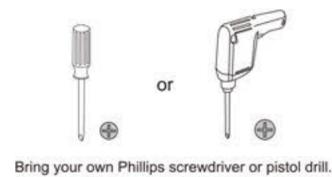


Part List

No.	Part
①	Supporting beam x2
②	Side bracket x2
③	Lifting column x4
④	Pedestal x 2
⑤	Handset x 1

No.	Part
⑥	Control box x1
⑦	Cables x 1
⑧	Cable management net x1
⑨	Allen key x 1


Installation Instruction

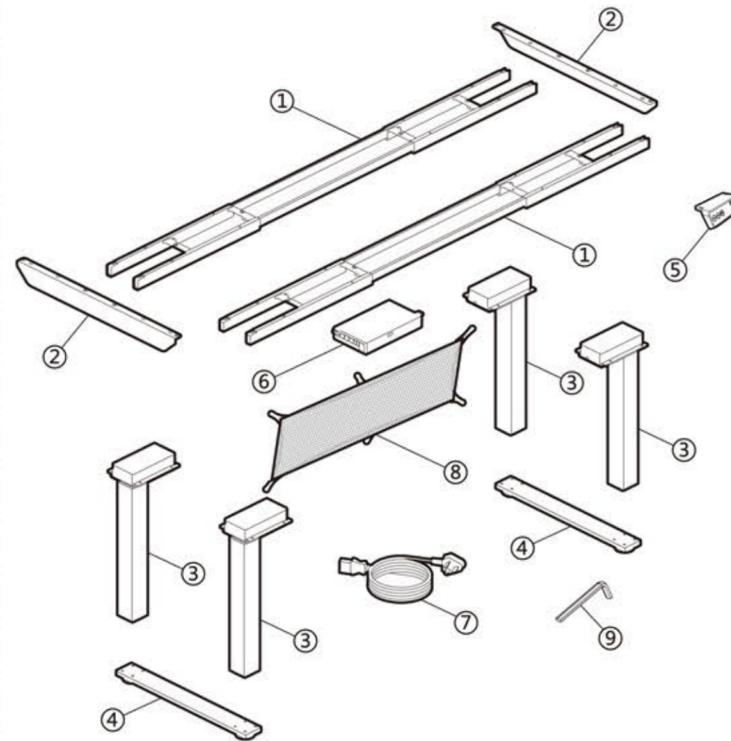

Installation Steps

STEP1


Attach the side brackets to the beam

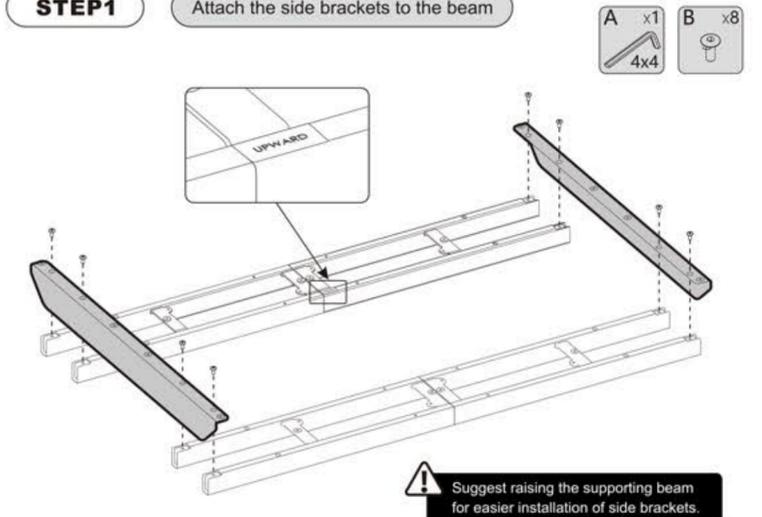

STEP2

Adjust the supporting beam

- Turn over the supporting beam.
- Loosen the 8 screws of the beam and stretch the frame, adjusting the beam to the suitable position.
- When there are holes on the tabletop, the beams are stretched to align with the holes; when there are no holes on the table top, the brackets on both sides are installed closely to the edge of the tabletop.

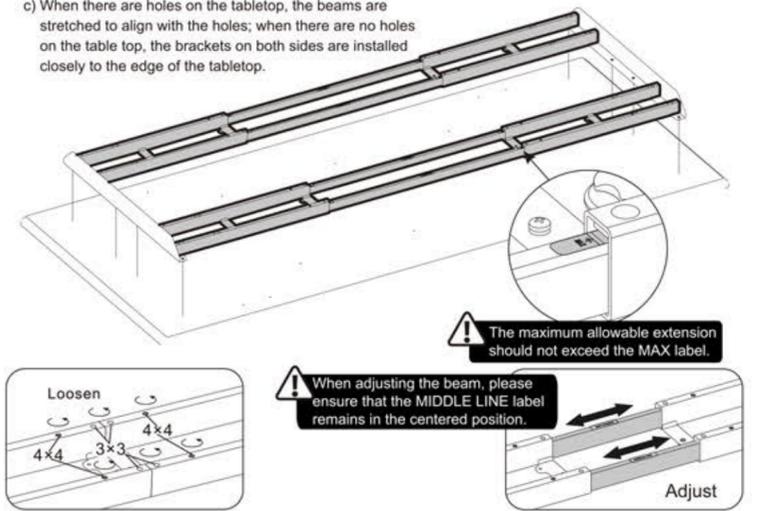

STEP3 Install the tabletop

9 \times 1 3x3 A \times 1 4x4 E \times 16 Self-prepared

Fix the screws in the sequence of: ● → ■ → ▲

Outer side ▲ uses 4x4 Allen key
Inner side ▲ uses 3x3 Allen key

STEP4 Install the lifting columns

A \times 1 4x4 C \times 16

STEP5 Attach the pedestals

A \times 1 4x4 D \times 16

STEP6 Install the handset

E \times 2 Self-prepared

Choose either of the two installation methods.

Left-handed install here Right-handed install here

STEP7 Install the control box

E \times 2 Self-prepared

STEP8 Connect the wires

Connect wires of the same color to the corresponding interfaces.

STEP9 Install the cable management net hook

E \times 6 Self-prepared

When there are holes on the tabletop, the position of the cable management net hooks will be determined according to the hole positions. When there are no holes on the tabletop, the position of the hooks can be determined by laying the cable management net flat.

STEP10 Install the cable management net

Turn over the desk, make sure the handset is facing upwards along the process.

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Problem	Method
The desktop could not function	Check if all the cables well connected
Rising in a low speed	Check if overloaded, max loading: 300kg
The desk moving downwards without any operation	
Automatically Self-Reset	
Go down but not go up or go up but not go down	Reset
The upper and downward height is not enough	
The desk could not lifted	
Overwork (Duty cycle: Max 2min on/18min OFF)	Restart after suspend for 18mins while connecting with power
The power module cannot be used	Please reset or raise/lower the table, then wait for 1 second before using it
Press "▼"button while desk rises	Check whether there are barriers beneath the table or cables are entwined with other things



Attention

- 1.Power supply: AC100V-240V, frequency 50/60Hz.
- 2.Operating environment: Indoor, 0-40℃.
- 3.Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
- 4.The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
- 5.Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
- 6.Before first use, familiarize yourself with all the functions and program settings of the product.

7. Children are not allowed to play on this product. Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
10. Operate the equipment only after understanding the relevant hazards. Children under the age of 14 or individuals with physical or sensory impairments or mental disabilities should use the equipment under proper supervision and guidance. Children should not have unattended access to the product.
11. Children should not perform cleaning and user maintenance without supervision.
12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
14. When moving the product, ensure that there are no items placed on the table, the drawers and doors are closed securely, screws are tightened, and the power plug is unplugged. Use at least 2 people for moving. If necessary, keep the original packaging for future transportation.
15. When storing for a long time, unplug the power cord and clean out any loose objects. Store it in a cool and dry place.
16. This product contains small parts that can pose a choking hazard if swallowed accidentally. Keep these small accessories away from children.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.